













LOGI-KEY Key Management Systems



Strike Industries' LOGI-KEY family of products provides building access key logistics management for correctional institutions utilizing Deister Electronic RFID proxSafe Key Tag technology, proxSafe flexx modular safekeeping technology, amanTag compact technology, and other related Deister Electronic technologies. The LOGI-KEY technologies can be integrated with facility access control systems to provide logistical information on the location and ownership of critical facility access keys within the framework of site visual display systems, information systems, and management and control systems.

proxSafe maxx System	proxSafe flexx System	proxSafe keyTracer System
 Cabinet (including keyTags)	 Housing  keyPanel (including keyTags)	 keyTag Sets
choose the suitable software system:		
 proxSafe Commander Terminal C3	 proxSafe Argus Terminal	 proxSafe keyTracer
 proxSafe Commander	 proxSafe Argus Manager	 proxSafe Argus keyTracer

Logi-Key proxSafe flexx

proxSafe flexx is a flexible solution for keys and other assets.

Compose your complete system from the following components:

- Cabinet and panels
- Terminal and optional card reader
- Accessories such as interface adapter, power supply, de-sealing tool

Doors are hinged at left and can be converted to hinge at right.



MODEL

00331.000

DESCRIPTION

proxSafe bancx housing 4x24U

- Up to 512 keys per cabinet
- Steel housing with four vertical drawers for up to 512 proxCylinders
- pre-wired with flexx-backplanes and back-up batteries, 2 service keys
- dimensions (inches): H 70 x W 38 ¾ x D 27 ½

(Terminal and keyPanels are not included)



00358.000

proxSafe flexx housing 6U / steel door

Steel housing for up to 32 proxCylinders, with

- flexx-backplane,
- back-up battery,
- 2 service keys

dimensions (inches): H 18 ¼ x W 24 x D 8 ¼



00357.000

proxSafe flexx housing 6U / steel door with window

same as above plus a window in the door

00364.000

proxSafe flexx housing 6U / without door

same as above but without door

00360.000

proxSafe flexx housing 12U / steel door

Steel housing for up to 64 proxCylinders, with

- flexx-backplane,
- back-up battery,
- 2 service keys

dimensions (inches): H 27 ½ x W 24 x D 8 ¼



MODEL	DESCRIPTION
00359.000	proxSafe flexx housing 12U / steel door with window same as above plus a window in the door
00366.000	proxSafe flexx housing 12U / without door same as above plus a window in the door
00362.000	proxSafe flexx housing 24U /steel door Steel housing for up to 8 keyPanels,with <ul style="list-style-type: none"> • flexx-backplane, • back-up battery, • 2 service keys dimensions (inches): H 55 x W 24 x D 8 ¼ (keyPanels are not included)
00361.000	proxSafe flexx housing 24U / steel door with window same as above plus a window in the door
00365.000	proxSafe flexx housing 24U / without door same as above plus a window in the door
00355.000	proxSafe flexx keyPanel 16/3U <ul style="list-style-type: none"> • Complete with 16 proxCylinders, 16 keyTags, 16 seals and 16 keyRing 25
00356.000	proxSafe flexx keyPanel 16/6U <ul style="list-style-type: none"> • Wide spacing for large keys or keyRings • Complete with 16 proxCylinders, 16 keyTags, 16 seals and 16 keyRing 25



MODEL
00367.000

DESCRIPTION
proxSafe flexx blind Panel 3U

- Cover for unused keyPanel positions



00301.000

proxSafe Commander Terminal C3

Compact user Terminal for stand-alone operation:

- prepared for installation of proxEntry or third-party card reader
- communicates with up to 30 multiplexers.
- RS485/deBUS and O.C./Wiegand interface for installation of a
- proxEntry or third-party reader

Please note that installations and upgrades for each module will require a valid license code.



00341.000

proxSafe Commander Software for Windows

Software for managing the proxSafe Terminal within a network:

- quick and easy management of users, keys and time
- profiles,
- configurable reports about key position as well as key issues and returns,
- multi-user capability: workstations need a web browser only,
- continuous data exchange with all connected Terminals
- Email-Reporter and Alarm Handling

License price for one installation with one terminal



00342.000








proxSafe Commander Software for Windows Extension Module

License price for one further terminal in one installation

00378.000

proxSafe Commander Web User Interface Module

License price for one installation

MODEL	DESCRIPTION	
00307.000	proxSafe keyTag assembly 16 Includes: <ul style="list-style-type: none"> • 16 keyTags • 16 keyRings 25 • 25 seals gray 	
00314.000	proxSafe keyRing 25 <ul style="list-style-type: none"> • 2mm steel, • diameter 25mm, • 10 pieces 	
00368.000	proxSafe keyRing 60 <ul style="list-style-type: none"> • 4mm steel ring, • diameter 60 mm, • 5 pieces with shuttle • 10 gray seals 	
00369.000	proxSafe keyRing 90 <ul style="list-style-type: none"> • 4mm steel ring, • diameter 90 mm, • 5 pieces with shuttle • 10 gray seals 	
00308.000	proxSafe one-time seal, gray <ul style="list-style-type: none"> • 50 pairs 	
00310.000	proxSafe one-time seal, green <ul style="list-style-type: none"> • Engraved unique number, • 50 pairs 	
00311.000	proxSafe de-sealing tool For destructive opening the one-time seals.	



MODEL	DESCRIPTION
00351.000	<p>TCP/IP module “DigiConnect” Connecting the proxSafe Terminal and PC via TCP/IP network,</p> <ul style="list-style-type: none"> to be mounted on the maxx or flexx backplane PCB
00315.000	<p>proxSafe Power Supply 90-250VAC</p> <ul style="list-style-type: none"> Input: 90-250VAC/50-60Hz , Output: 13.8V/4A, for C-rail mounting in a junction box, no cables included
00323.000	<p>Emergency opening device Battery operated device for opening proxSafe rack modules and proxSafe cabinets in case of power or equipment failure.</p>
02020.000	<p>Interface Adapter SNG3 RS485 – USB Connects the PC to the proxSafe Terminal via USB</p> <ul style="list-style-type: none"> cables included
06700.000	<p>power supply 230V – 12V Interface adapter for SNG 3</p>
02206.000	<p>proxMagic reader PRD5/2V HID Multi-frequency, multi-technology reader, specification to be agreed upon, HID® compatible</p>
00317.000	<p>proxSafe transponder card, 10 pc.</p> <ul style="list-style-type: none"> White, PVC, ISO 7810, for proxSafe Terminal keyTag reader



02020.000 **Interface Adapter SNG3 RS485 – USB**
Connects the PC to the proxSafe Terminal via USB

- cables included

06700.000 **power supply 230V – 12V**
Interface adapter for SNG 3

02206.000 **proxMagic reader PRD5/2V HID**
Multi-frequency, multi-technology reader, specification to be agreed upon, HID® compatible

00317.000 **proxSafe transponder card, 10 pc.**

- White,
- PVC,
- ISO 7810,
- for proxSafe Terminal keyTag reader

